
Personal Mobility

PRODUCT MANUAL





Scan the QR code to download the latest user materials and obtain the latest updates and safety instructions.

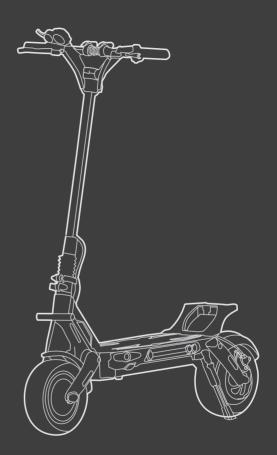



The dream of electric technology.

Pictures for reference only, subject to our existing products.



## Diagram And Functions

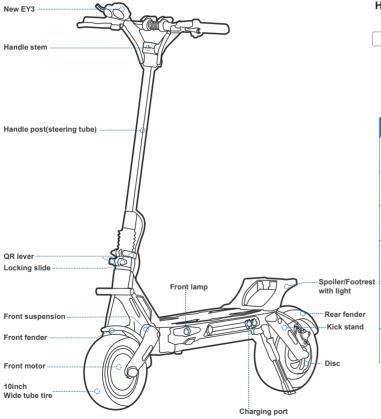



	Name	Function	Operation method		
	Warning Light Button	Turn on the warning light	Press the Warning Light Button, the left&right signals will keep blinking until press the Warning Light Button again.		
	Motor system selection button	Enable SINGLE/DUAL drive mode	Switch modes through pressing the button.		
	Power button	Turn on/ off power	1.Press and hold the Power button to turn on/off the scooter.     2.Press the button to adjust the speed gear.		
st	Set button	Settings	1.Press and hold the Set button to enter/exit ECO mode.     2.Press the button to switch battery voltage/percent indication		
	Mode button	Mode selection	1.Press and hold the Mode button to enter/exit the mode setting, and automatically return to the main interface after 30s. 2.Press the the Mode button to switch ODO/time indication.(Time defaults)		
	Accelerator	Speed up	Pull the throttle to accelerate.		



	Item	Parameter
Product	Model	Dualtron Victor luxury
	Battery Capacity	60V24Ah CN / 60V30Ah (LG or Samsung)
Battery	Range	80km / 100km
Dattery	Charging Ambient Temperature	0 to 40°C (Battery temperature exceeds 55°C,BMS start protection program.)
	Battery Management System	Over-heating, short circuit, over-current, over-discharge and over-charge protection
	Max. load	120kg
Rider	Recommended Age	14–60 years old
Display	Туре	New EY3 display(DUALTRON APP available)
Motor	Motor Type	BLDC Hub Motor
motor	Nominal Power	1200Wx2
	Net Weight	34.8kg
	Max. Slope	Around 43%[23°]
	Drive System	Single/ Dual drive
	Speed	25km/h
	Length × Width × Height	1110 x 609 x1247mm
Machine	Folded: Length × Width × Height	1110 x 279 x560mm
maomino	Wheelbase	Approx.880mm
	Ground Clearance	Approx.155mm
	Traversable Terrain	Asphalt/flat pavement; obstacles < 5 cm; gaps < 5 cm
	Operating Temperature	-5 to 45°C
	Storage Temperature	-20 to 50°C



	Туре	Hydraulic brake
Brake	Electric Brake	ABS&EBS (Indicating the battery temperature exceeds 55°C,BMS start protection program,ABS/EBS fails.)
	Input Voltage	100-120V/200-240V~
Charger	Max. Output Voltage	66.4V 1.75A
	Туре	10 inch tube tire
Tire	Tire Pressure	50 psi
	Material	Rubber
Suspension	Туре	F&R suspension cartridge (replaceable)
Suspension	Optional	(Default) Softest Medium soft Medium Medium hard Hardest


\*Disclaimer: this is not a legal opinion or legal advice. The information provided herein (including in the App) is for your convenience and information purpose only. It is not intended to cover every piece of law and/or regulation that may be applicable to this product. DUALTRON explicitly hereby disclaims any and all warranty and/or representation, express or implied, related to completeness, accuracy, up-to-date of such information. DUALTRON reserves the right but not obligation to correct, implement and/or update the information. You shall use the information at your own risk. It is your sole responsibility to learn and understand any and all the law and/or regulation, requirements, prohibition, restriction and/or limitation imposed by either law, government authority, court, private party or the others that may apply to your use of this product.

<sup>\*</sup>Theoretical Range: tested while riding with a full battery, 75 kg load, 25°C, at the speed of 25 km/h on average on pavement.

<sup>\*</sup>Typical Range: tested while riding with a full battery, 75 kg load, 25°C, at the speed of 50 km/h on average on pavement. (Some of the factors that affect range include speed, number of starts and stops, ambient temperature, etc.)

<sup>\*</sup>Max.Speed: tested while riding with a full battery,75kg load,25°C,straight road on flat road with no wind. (Some environmental factors can affect max speed,uneven roads, crooked roads, temperature, wind, etc.)



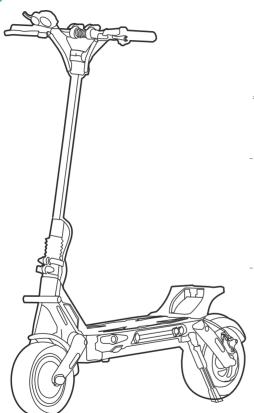

### Accessories





Battery charger x1



Manual




Screw Cap x 2



Multitool x 1

# Bluetooth Connection

#### **APP** Download Guide

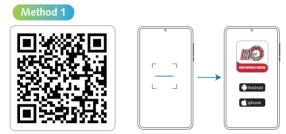

- 1.Scan the QR code to download the APP.
- 2.Choose the mobile phone system that suits you to install, and register / log in.




1.Search "DUALTRON" in the application and download it, and register / log in.

### Pair the Bluetooth on the APP



Power on the scooter.

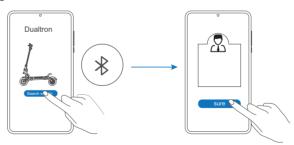


Click "Search vehicle" and pair with your scooter. \* The scooter is connected to the Dualtron app when the Bluetooth symbol lights up.


Select "bind as owner".

(No one else can connect, only people authorized by you are allowed to connect. Authorizations are created on the app.)



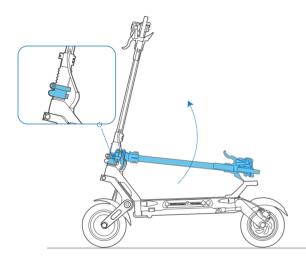

- ① Release the QR lever, raise the locking slide upwards, raise the steering tube, then lower the locking slide downward. ② Tighten the finishing screw properly to lock the QR lever so that
- the locking slide is firmly fixed in any direction, and check for looseness during use.

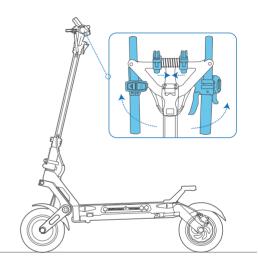

- ① Loosen the QR lever, pull the locking slide inward and raise the handlebar, then close the QR lever and tighten the set screw.
- ② Place the locking slide up to the safety line and lock it so that it is firmly fixed with the QR lever. Always check for looseness during use.



1. Power on the scooter and choose the speed mode. \* Please choose the speed mode before riding! Note:Speed mode can be choose via the Dualtron app.




**4.** Slow down by releasing the throttle and squeezing brake levers.



2. Stand on the footboard with one foot and push off with the other foot to start gliding. \*Make sure you have disabled SAFE mode.(SAFE mode esetting via Dualtron app.Deactivate safe mode by squeezing brake lever.)



**3.** Put both feet on the footboard and stand stably. Pull the throttle to speed up.



**5.** To turn, shift your body and turn the handlebar slightly.


\* Please watch out for road conditions,

sufficient turning space is required.




When hard braking, serious danger or injury may occur. Maintain a moderate speed and look out for potential hazards.




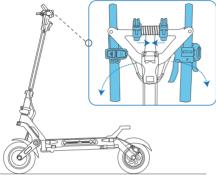

Loosen the QR lever, push the locking slider inward and fold the handlebars down.

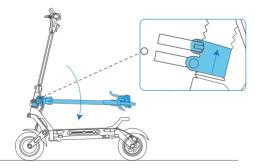


Lay the steering tube down while raising the locking slide.

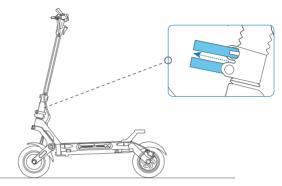

Loosen the QR lever and move the locking slide upward.

\_You must hold the steering tube with your hand to prevent falling down and hitting.

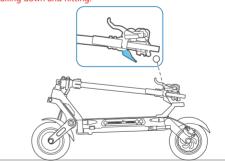

Lock the handlebar hook to the footrest.

Lock the handlebar when lift scooter.

